




# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG HT-E350. You'll find the answers to all your questions on the SAMSUNG HT-E350 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SAMSUNG HT-E350**  
**User guide SAMSUNG HT-E350**  
**Operating instructions SAMSUNG HT-E350**  
**Instructions for use SAMSUNG HT-E350**  
**Instruction manual SAMSUNG HT-E350**

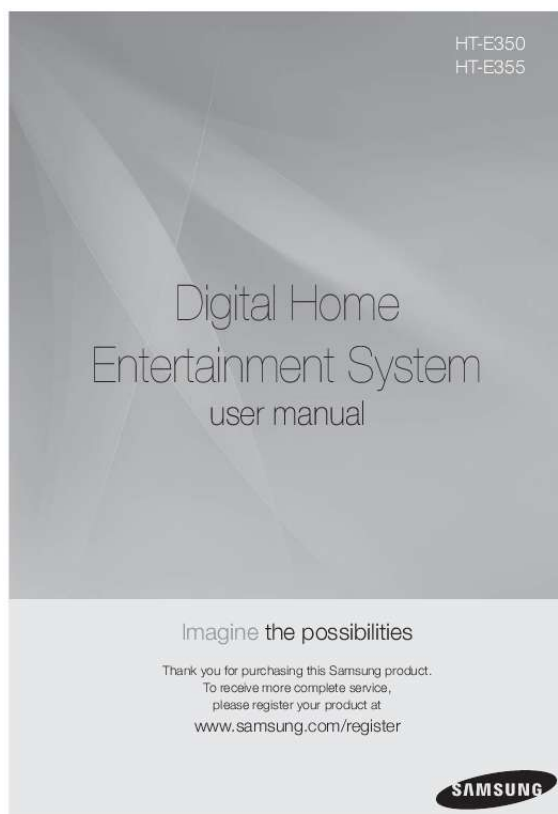

[Your user manual](#)  
[SAMSUNG HT-E350](#)

**Manual abstract:**

2) Keep these Instructions. 3) Heed all warnings. 4) Follow all instructions. 5) Do not use this apparatus near water. 6) Clean only with dry cloth. 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.

A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11) Only use attachment/accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 13) Unplug this apparatus during lightning storms or when unused for long periods of time. 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Precautions** · Ensure that the AC power supply in your house complies with the identification sticker located on the back of your product. · Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4 inches). · Do not place the product on amplifiers or other equipment which may become hot. Make sure the ventilation slots are not covered. · Do not stack anything on top of the product. · Before moving the product, ensure the Disc Insert Hole is empty. · In order to disconnect the product completely from the power supply, remove the AC plug from the wall outlet, especially when left unused for a long period of time. · During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the product. · Do not expose the product to direct sunlight or other heat sources.

This could lead to overheating and malfunction of the product. · Protect the product from moisture, and excess heat or equipment creating strong magnetic or electric fields (i.e. speakers.). · Disconnect the power cable from the AC supply if the product malfunctions. · Your product is not intended for industrial use.

Use of this product is for personal use only. · Condensation may occur if your product or disc has been stored in cold temperatures. If transporting the product during the winter, wait approximately 2 hours until the product has reached room temperature before using.

· The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.

Accessories Check for the supplied accessories below. FUNCTION MUTE DSP/EQ 1 4 7 VOL 2 5 8 0 3 6 9 VOL DISC MENU HOME TITLE MENU TUNING TOOLS INFO RETURN AUDIO UPSCALE P.BASS EXIT GIGA S/W LEVEL TUNING MO/ST A USB REC B C D TUNER MEMORY DIMMER REPEAT Video Cable (AH39-40001V) FM Antenna (AH42-00021A) Remote Control (AH59-02425A)/ Batteries (AAA size) (4301-000116) User Manual (AH68-02460R) English 3 Safety Information Cautions on Handling and Storing Discs Small scratches on the disc may reduce sound and picture quality or cause skipping.

Be especially careful not to scratch discs when handling them. Holding discs · Do not touch the playback side of the disc. · Hold the disc by the edges so that fingerprints will not get on the surface. · Do not stick paper or tape on the disc. · HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



[Your user manual](#)  
[SAMSUNG HT-E350](#)